Mi Smart Standing Fan 2 Lite User Manual





Safety Instructions

Read this manual carefully before use, and retain it for future reference.

PRECAUTIONS

Installation

- Make sure the fan is properly installed according to the instructions, so as to avoid electric shocks, fire, personal injury, or other damage.
- ⚠ Do not connect the fan to a power outlet as long as it is not assembled.

Handling the Fan

- 1 Turn off and unplug the fan before moving it.
- Firmly hold the fan stand to avoid it from falling down and causing personal injury.

Using the Fan

- Immediately stop using the fan if it makes unusual sounds, gives off bad odors, overheats, or rotates irregularly.
- ⚠ Do not lean on or tilt the fan while it is running.
- Do not push the fan's head repeatedly so as to avoid damage to the internal mechanism.

Power Cord

- ⚠ Unplug the power cord before repairing or moving the fan.
- ⚠ Always unplug the fan by pulling the power plug rather than the cord.
- When the power cord is damaged, it must be replaced with a genuine power cord purchased from the manufacturer or after-sales service department.

WARNINGS

Improper use may lead to electric shocks, fire, personal injury, or other damage.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (For European countries or regions)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 Children should be supervised to ensure that they do not play with the appliance. (For no European countries or regions)
- Once assembly completed, it's strictly forbidden to remove the guards for any purpose.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Safety Instructions

Read this manual carefully before use, and retain it for future reference.


WARNINGS

Improper use may lead to electric shocks, fire, personal injury, or other damage.

- Do not use this fan in place where it is easy to fall over or where there
 are other unstable objects nearby.
- O Do not use this fan in hot and humid environments such as a bathroom.
- Do not use this fan if its power cord is damaged or its power plug is loose
- On not use this fan if its front grille is not installed, or its rear grille is loose or fell off
- Do not allow adults who are incapable of operating this fan or children to use it.
- O Do not disassemble or repair this fan.
- Do not pinch, bend, or twist the power cord too much, so as to prevent from exposing or breaking its core.
- On not insert your fingers or any object into the front grille, rear grille, or the fan blades when the fan is in use.
- Seep hair and fabrics away from the fan to avoid getting them caught in the fan.
- O not use any improper power outlet.
- O Do not use the supplied power cord with any other device.

Under normal use of condition, this equipment should be kept a separation distance of at least 20cm between the antenna and the body of the user.


Package Contents

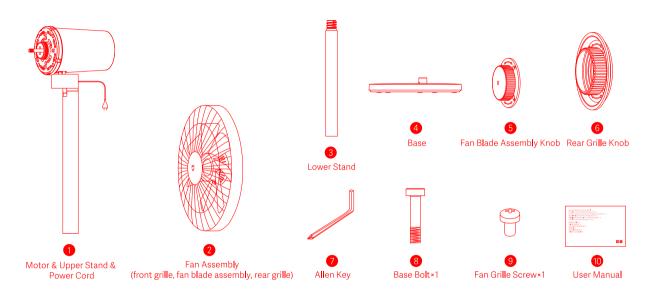

Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.


Overview

Wi-Fi Indicator Speed/Delayed Turn-off Indicator Sleep Mode Indicator On/Off Button Speed Adjustment/Mode Switch Button Oscillation Button Scheduled Turn-off Button Center Point Indicator (no light effect): Center point for the fan's head angle range.

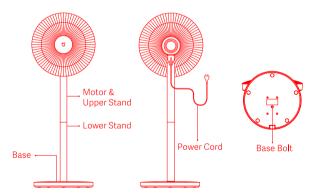


Installation Instructions

Step 1: Base installation

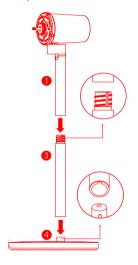

1(1). Standing fan mode: Connect 3 lower stand to 1 upper stand, then install 3 it onto 4 base as shown in the figure.

 1(2). Table fan mode: Install 1 upper stand directly onto 4 base.



2. Insert 8 base bolt into the hole on the bottom of the base.




3. Use the included **?** Allen key to turn **3** base bolt clockwise to fix the stand to the base.

Installation Instructions


Step 2: Open the fan assembly

Disassemble 2 fan assembly as shown in the figures below: ①Turn the ① front grille counterclockwise until the grilles are properly loosened. ② Then remove front grille from ③ rear grille and take out ② fan blade assemby.

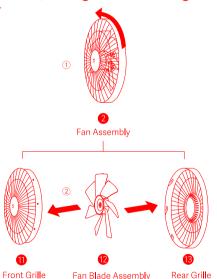


Step 3: Install the rear grille

Make sure "♣" points up when installing **(3)** rear grille onto the motor, and turn **(6)** rear grille knob clockwise to tighten the rear grille to the motor.

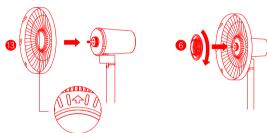

Step 4: Install the fan blade assembly

 
Align the center hole of 12 fan blade assembly with the motor's shaft and install it onto the shaft, then install 5 fan blade assembly knob onto the motor's shaft. Turn the knob counterclockwise in order to fix the fan blade assembly to the motor's shaft.



Installation Instructions

Step 5: Install the front grille

- 1. Align the front grille alignment mark with the rear grille left alignment mark, and make sure the 11 front grille is properly embedded into the 18 rear grille.
- 2. Turn the front grille clockwise until the Front Grille Alignment Mark aligns the Rear Grille Right Alignment Mark. Make sure the grilles are securely fastened.

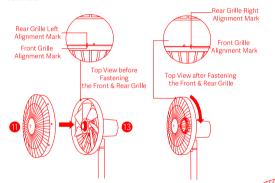

Step 6: Fasten the front grille

Allen key to tighten it.

How to Use

Connect to a power outlet

Plug the power cord into a power outlet. Once you hear a beep, the fan is connected successfully.



Turn on/off

Turn on

Press the button (1) to start the fan. When turned on for the first time, the default speed is slow (1).

Turn off

When the fan is working, press and hold the button (1) to stop it.

Switching Speed/Mode

Switching speed

Press the button (b) to adjust the speed. With each press, the corresponding status indicator will be on (see the table below). The fan will remember and apply the last used speed mode when turned on again.

| Fan Speed | Slow (1) | Medium (2) | Fast (3) |
|---------------------|----------|------------|----------|
| Indicator Status | *•• | **• | *** |

Note: ★ means the indicator is on: • means the indicator is off.

How to Use

Switching mode

Press and hold the button (4) to switch between direct breeze and sleep mode. The sleep mode indicator is on while in sleep mode, and off while in direct breeze mode.

Note: The fan is set to direct breeze by default. The fan will remember and apply the last used mode when turned on again.

Enable/Disable Oscillation

Press the button to enable or disable 90° oscillation. The fan will remember and apply the last used oscillation setting when turned on again.

Delayed Turn-off

Press the button ① to cycle through the delayed turn-off times: 1 hour, 2 hours, 3 hours, and disabled, and the corresponding status indicator(s) will be on (see the table below). Five seconds after using the delayed turn-off function, the status indicator(s) will display the corresponding status of the currently selected speed.


| Scheduled Status Indicator | Disabled | | 2 hours | 3 hours |
|----------------------------------|----------|-----|---------|---------|
| Status | ••• | *•• | **• | *** |

Note: ★ means the indicator is on; • means the indicator is off.

For more delayed turn-off options (up to 8 hours), please go to the Mi Home/Xiaomi Home app.

Adjust the Airflow Direction

 Gently lift or push down the fan's head or fan grille to adjust the airflow upwards or downwards.



Connect with Mi Home/Xiaomi Home App

Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mi Home/Xiaomi Home" in the app store to download and install it.Open Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow prompts to add your device.



* The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Note: The version of the app might have been updated, please follow the instructions based on the current app version.



Connecting to Wi-Fi

Simultaneously press and hold the buttons (1) and (46). Once you hear a beep, the fan is awaiting a connection, then you can pair it with a device via the app.

How to Use

Wi-Fi Indicator Status:

| Wi-Fi Status | Awaiting connection | Connecting | Connected | Couldn't connect |
|---------------------|---------------------|---------------|-----------|------------------|
| Indicator Status | Blinking orange | Blinking blue | Blue | Orange |

Reseting the Wi-Fi

The Wi-Fi connection needs to be reset on the circumstances listed in the table below.

The Mi account that the fan is paired with has been changed.

The router that the fan is connected to has been changed.

The account or password of the router that the fan is connected to has been changed.

The Mi Home/Xiaomi Home and cannot control the fan.

Simultaneously press and hold the buttons (1) and (4). Once you hear a long beep, the Wi-Fi connection has been reset successfully and then the Wi-Fi is awaiting a connection.

Enabling/Disabling Wi-Fi Connection

Simultaneously press the buttons (1) and (2) when the fan is working, the Wi-Fi connection is disabled and the fan is turned off.
When the fan is turned on, the Wi-Fi connection is enabled automatically.

Child Lock Function

To disable the function of child lock, go to the page of Mi Smart Standing Fan 2 in the Mi Home/Xiaomi Home app, or simultaneously press and hold the buttons (and (a) until you hear a long beep.

Note: Resetting the Wi-Fi connection or unplugging and plugging in the fan again can also disable this function.

Trobleshooting

| Fault | Possible Cause | Solution | |
|----------------------|--|---|--|
| | No electricity from the power outlet or the fan does not connect to the power. | Connect to a power outlet that meets the fan's requirements. | |
| The fan doesn't work | The fan blade assembly or the grilles are not installed properly. | Follow the steps in the user manual to check and make sure they are securely installed. | |
| | Child lock is enabled. | Disable the child lock in the Mi Home/Xiaomi Home app, or disconnect the fan from power then connect again. | |
| Wi-Fi is unable | The Wi-Fi connection is 5 GHz. | Connect to a 2.4 GHz Wi-Fi connection. | |
| to connect | The fan is offline for more than half an hour. | Reset the Wi-Fi connection. | |
| Fan blades are stuck | Fan blades are stuck by a foreign object. | Unplug the fan and remove the foreign object. | |

Specifications

| Name | Mi Smart Standing Fan 2 Lite | Rated Voltage | 220 - 230 V~ | Power Cord Length | 1.6 m |
|---|------------------------------|-------------------|---------------------|-----------------------|--------------------------------|
| Model | JLLDS01XY | Rated Frequency | 50/60 Hz | Wireless Connectivity | Wi-Fi IEEE 802.11b/g/n 2.4G Hz |
| Туре | AC Standing Fan | Rated Power | 38 W | Item Dimensions | 343 × 330 × 1000 mm |
| Gross Weight | 4.5 kg | Net Weight | 3.5 kg | Noise Emission | ≤58 dB(A) |
| *Radio frequency and radio transmission power | | | | | |
| RF Specification | | Working Frequency | | Maximum Output Power | |
| 2.4G Wi-Fi | | 2412-2472 MHz | | 19.67 dBm | |

| Product Information Requirements | Test data |
|--|--|
| Maximum fan flow rate (F) | 32.2 m³/min |
| Fan power input (P) | 36.9 W |
| Service value (SV) | 0.87 (m³/min)/W |
| Maximum air velocity(c) | 3.2 meters/sec |
| Measurement standard for service value | EN IEC 60879:2019 |
| Standby power consumption (PSB) | 0.57 W |
| Fan sound power level (LWA) | 56 dB(A) |
| Seasonal electricity consumption (Q) | 12.45 kWh/a |
| Contact details for obtaining more information | Zhejiang Xingyue Electric Equipment Co., Ltd. South Side, 24th Floor, Jinpin Building, Headquarters Center, Yongkang City, Zhejiang Province, China |

WARRANTY NOTICE

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE. INDEED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD. OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

1. LIMITED PRODUCT WARRANTY

XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period.

The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website https://www.mi.com/en/service/warranty/.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above.

Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free.

Xiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

2. REMEDIES

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) repair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shipping costs.

3. HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service, you must deliver the Product, in its original packaging or similar packaging providing an equal degree of Product protection, to the address specified by Xiaomi. Except to the extent prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

4. EXCLUSIONS AND LIMITATIONS

Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademarks, trade name or "Xiaomi" or "Mi" logo.

The Limited Warranty does not apply to any (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi.

It is your responsibility to backup any data, software, or other materials you may have stored or preserved on the product. It is likely that the data, software or other materials in the equipment will be lost or reformatted during the service process, Xiaomi is not responsible for such damage or loss.

No Xiaomi reseller, agent, or employee is authorized to make any modification, extension, or addition to this Limited Warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase. Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

The present warranties do not apply in Hong Kong and Taiwan.

5. IMPLIED WARRANTIES

Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular purpose) will have a limited duration up to a maximum duration of this limited warranty. Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation will not be applied in these cases.

6. DAMAGE LIMITATION

Except to the extent prohibited by applicable law, Xiaomi shall not be liable for any damages caused by accidents, indirect, special or consequential damages, including but not limited to loss of profits, revenue or data, damages resulting from any breach of express or implied warranty or condition, or under any other legal theory, even if Xiaomi has been informed of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of special, indirect, or consequential damages, so the above limitation or exclusion may not apply to you.

7. XIAOMI CONTACTS

For customers, please visit the website: https://www.mi.com/en/service/warranty/

The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

Regulatory Compliance Information



Hereby, Zhejiang Xingyue Electric Equipment Co., Ltd. declares that the radio equipment type JLLDS01XY is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.mi.com/global/service/support/declaration.html



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

For detailed e-manual, please go to www.mi.com/global/service/userguide

Importer: Beryko s.r.o. Pod Vinicemi 931/2, 301 00 Plzeň www.beryko.cz