

# **xiaomi** Electric Scooter 4 Lite User Manual



Read this manual carefully before use, and retain it for future reference.

## Safety Reminder


---




Always steer clear of obstacles.

## Watch out for Safety Risk


---

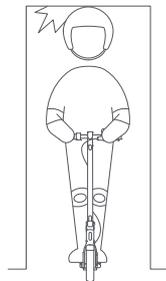


Avoid hitting your head on door frames, elevators, and other overhead obstacles.

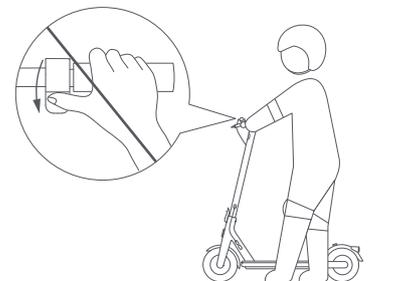

Do not press the accelerator when you are walking alongside the scooter.

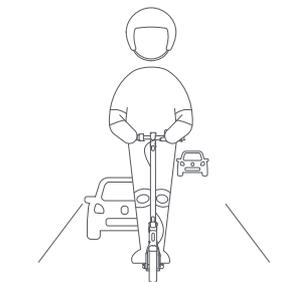


Unless otherwise authorized by the local laws, it is forbidden and illegal to ride on public roads, motorways, and expressways.

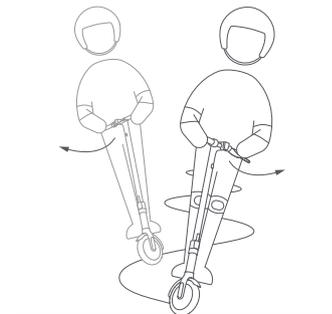

Do not abruptly change the steering direction at high speed.

## Do not Try Dangerous Actions

---

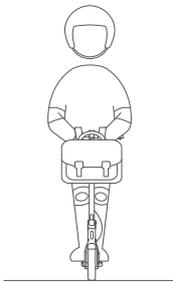

Do not hang bags or other heavy stuff on the handlebar.




Do not ride on one foot.



Do not ride in the rain. Do not ride through puddles or any other (water) obstacles.




Do not ride with anyone else, including children.

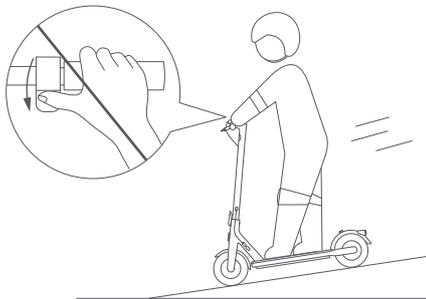

Do not accelerate when going downhill, and brake in time to slow down. When on a steep slope, you need to step off the scooter and push.



Do not use mobile phone or wear earphones when operating the scooter.

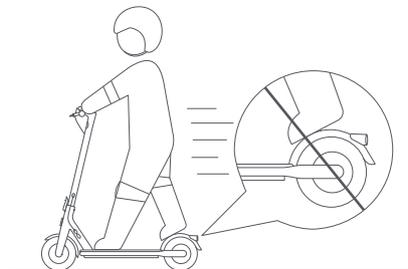


Do not keep your feet on the rear mudguard.



Do not let go of the handlebar while riding.

## Product Overview


---

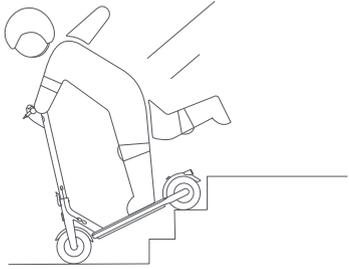

Do not try riding up or down stairs, nor try jumping over obstacles.




Do not touch the mechanical brake.

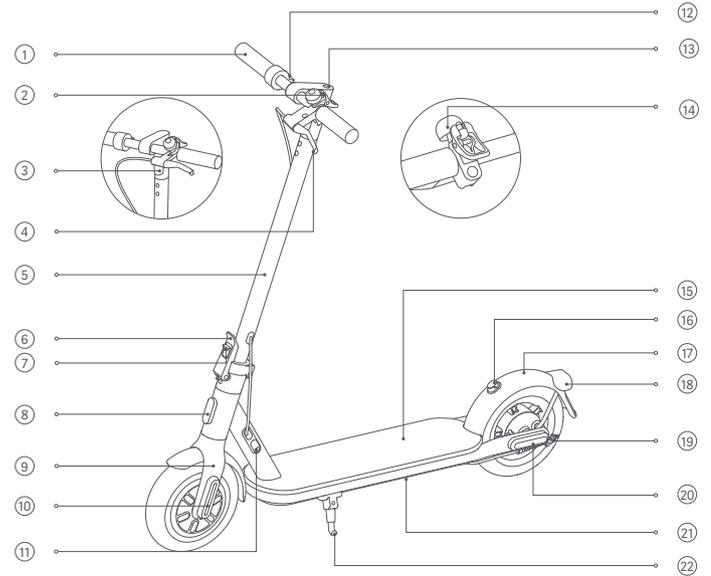

- |                                |                       |                               |
|--------------------------------|-----------------------|-------------------------------|
| ① Handlebar                    | ② Buckle & Bell Lever | ③ Headlight                   |
| ④ Brake Lever                  | ⑤ Stem                | ⑥ Quick Release Lever         |
| ⑦ Quick Release Lever Lock     | ⑧ Front Reflector     | ⑨ Front Fork                  |
| ⑩ Wheel Motor                  | ⑪ Charging Port       | ⑫ Accelerator                 |
| ⑬ Control Panel & Power Button | ⑭ Scooter Bell        | ⑮ Deck                        |
| ⑯ Hook                         | ⑰ Rear Mudguard       | ⑱ Tail Light & Rear Reflector |
| ⑲ Mechanical Brake             | ⑳ Side Reflector      | ㉑ Battery Compartment         |
| ㉒ Kickstand                    |                       |                               |

## Control Panel & Power Button

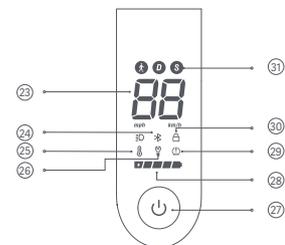

- ㉓ **Speedometer:** It displays the current speed when the scooter is working. When the scooter has an issue, it displays an error code. When the scooter is charging, it displays the current battery level.
- ㉔ **Bluetooth:** When the icon lights up, it indicates the scooter has been successfully connected to the mobile device.
- ㉕ **Temperature Warning:** If the battery temperature is too high or too low, the thermometer icon will be on. This will result in reduced acceleration and possibly charging issues. Use or charge the scooter after its battery temperature returns to the normal operating range.
- ㉖ **Error Notification:** When the wrench icon displays red, it indicates that the scooter has an error.
- ㉗ **Power Button:** Press the button to turn the scooter on, and hold the button for 2 to 3 seconds to turn the scooter off. When the scooter is on, press the button to turn on/off the headlight and tail light, and press twice to cycle through the modes.  
**Note:** The scooter will turn off automatically when it enters standby mode for more than 10 minutes. The standby mode means that the scooter is not being charged or not locked when it is on and not running.
- ㉘ **Battery Level:** The battery power is indicated by 5 bars, each representing approximately 20% of a full battery.
- ㉙ **Inflation:** When the inflation icon is on, it means that it is time to maintain the tires. Check the tire pressure and inflate the tires immediately to avoid tire damage caused by inadequate tire pressure. The recommended tire pressure is 50 psi.  
**Note:** After performing maintenance, follow the instructions in the app to disable the inflation reminder.
- ㉚ **Lock:** When the icon lights up, it indicates that the scooter is locked. You can lock/unlock the scooter via the Mi Home/Xiaomi Home app.
- ㉛ **Modes:** W is for walking mode, and its maximum speed is 6 km/h; the taillight will blink red when this mode is enabled. D is for standard mode. S is for sport mode, and it has high speed in this mode; it is recommended to use this mode after mastering the riding skills.

## Package Contents

---



Electric Scooter




User Manual



Important Information




Specifications



Allen Key




Screw × 5 (1 is spare)




Battery Charger




Extension Nozzle

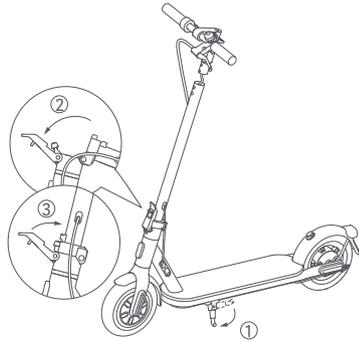

- 1 Put down the kickstand, and hold up the stem until it is completely in an upright position. Then push the quick release lever inward to the end.

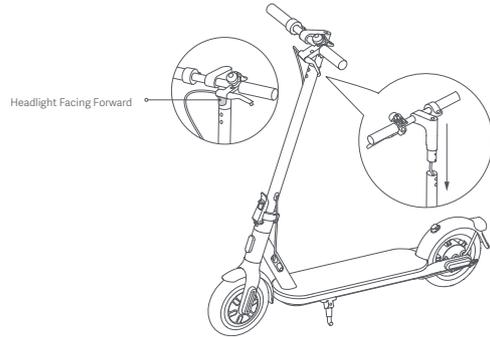


- 2 Install the handlebar onto the stem, and make sure to install the handlebar in the correct direction.

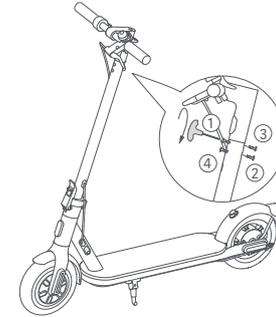

- 3 Follow the number order as illustrated to pre-tighten the four screws with the included Allen key. Make sure the handlebar is correctly installed and then tighten the screws thoroughly.


## Charge Your Scooter

---

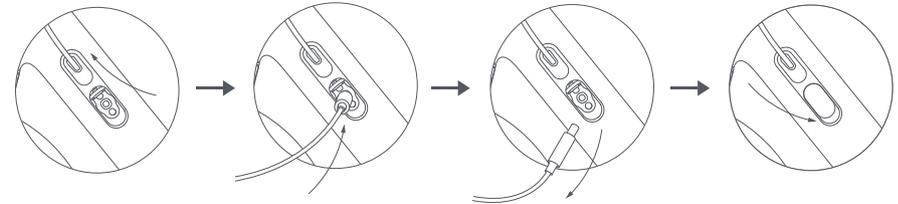


- 1 Lift up the rubber flap.
- 2 Connect the battery charger to the charging port.
- 3 Disconnect the battery charger from the charging port when charging is completed.
- 4 Put back the rubber flap.

The scooter is fully charged when the LED on the battery charger changes from red to green.

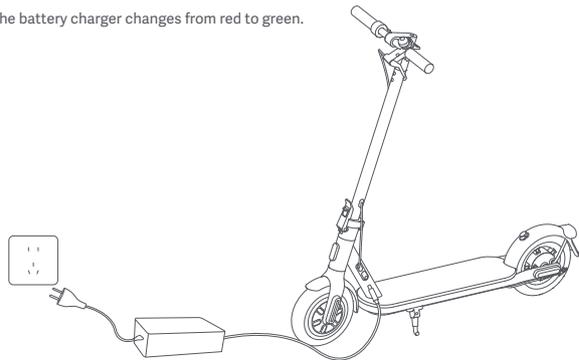


When the scooter is turned off for about a month with the battery level of the scooter being lower than 30%, the scooter will enter sleep mode. In this case, the scooter cannot be turned on. To exit the sleep mode, charge the scooter for about three seconds to activate the battery.

## Connecting with the Mi Home

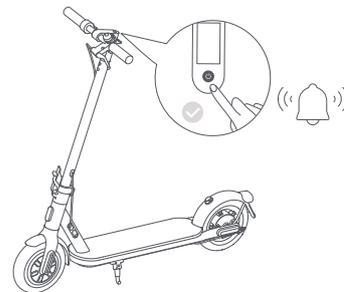


- 1 Before being activated, the scooter will keep beeping when turned on and is limited to 10 km/h. When the scooter is used for the first time, it must be activated via the Mi Home/Xiaomi Home app.

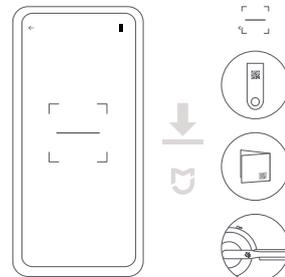


- 2 Scan the QR code on the label attached to the control panel, on the right side of the deck, or on the back cover of the user manual to download the Mi Home/Xiaomi Home app.


Note: The QR code is unique to your scooter, please keep it safe.

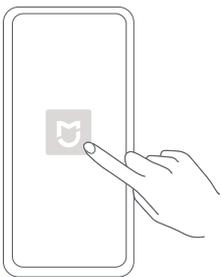


- 3 Open the Mi Home/Xiaomi Home app.

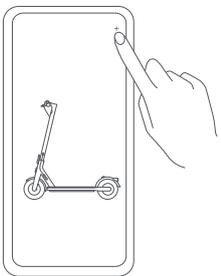

- 4 Tap "+" on the top right corner and open "Scan" to scan the QR code on the label attached to the control panel, on the right side of the deck, or on the back cover of the user manual again. Then follow the instructions in the app to add the scooter.

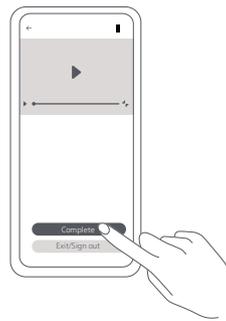

- 5 Watch the riding guide video. Do not exit the video before finishing it. Otherwise, the activation will fail.

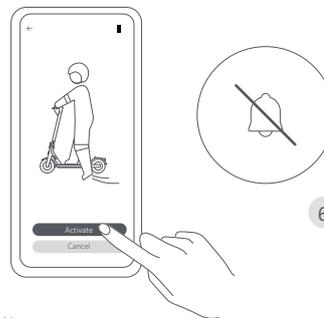

- 6 Tap "Activate" to activate the scooter. Once the scooter is activated, the beeping will stop and the speed restriction will be lifted.

Notes:

- The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.
- The version of the app might have been updated, please follow the instructions based on the current app version.

## Reset Bluetooth

---

Make sure the scooter is turned on. Press the accelerator and simultaneously press the power button 5 times to reset. When the scooter beeps, it has been reset successfully.

## Restore Factory Settings

---

Make sure the scooter is turned on. Squeeze the brake lever, and simultaneously press and hold the accelerator and the power button for 7 seconds. When you hear a beep, the scooter has been restored to factory settings. This operation will completely delete the data stored in the scooter, please proceed with caution.

Note: The scooter cannot be restored to factory settings during riding or when locked.

## How to Ride

---

### 1 Before Riding




Wear a helmet, elbow pads and knee pads before riding.

Note: Check the tire pressure before riding. The recommended tire pressure is 50 psi.

### 2 Starting & Accelerating




Step on the deck with one foot, and slowly kicks off the other on the ground.

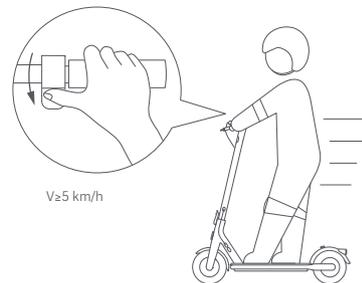


When the scooter starts to coast, put both feet on the deck and gently press the accelerator. The accelerator can be used once the scooter is going over 5 km/h.

### 3 Steering

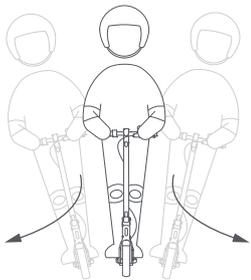


Tilt your body to the steering direction as you turn, and slowly turn the handlebar.

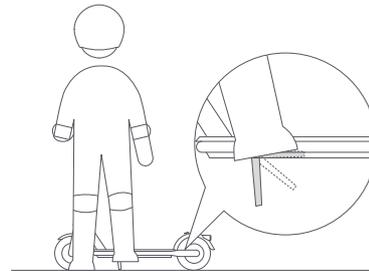

When the scooter slows down or stops, put one foot on the ground to get off the scooter. Put down the kickstand when parking the scooter.

### 4 Decelerating & Braking & Parking

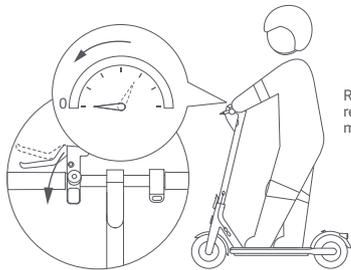


Release the accelerator to slow down, and you can enable the energy recovery function to help reduce the speed. Squeeze the brake firmly to make an emergency stop.




To avoid others using the scooter without your permission, you can lock the scooter when it is parked.

## Lock & Unlock Your Scooter

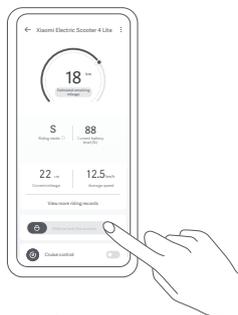


Slide to Lock

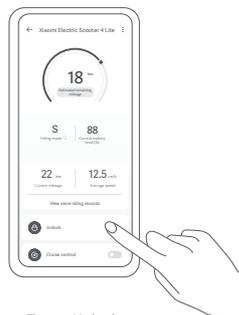

Tap to Unlock


- When the scooter is locked, the motor is locked and all the icons on the control panel will automatically go out except the Bluetooth icon and the lock icon. If the scooter goes beyond the Bluetooth connection range, the Bluetooth will be disconnected and its icon will go out.
- After the scooter is locked in the app, the motor will be locked and the power button will not function. If the scooter is moved forcibly, its front wheel cannot move normally, and it will have a rolling resistance accompanied by the buzzer alarm and a vibrating alert on the phone. This function cannot prevent the scooter from being stolen, please keep your scooter safe. The scooter will automatically turn off after 24 hours of being locked, and it will remain locked when turned on again. To unlock the scooter, tap "Unlock" in the app. Locking the scooter will consume the scooter's power, please use this function wisely. Note: The phone will vibrate only if the page of the scooter in the Mi Home/Xiaomi Home app is open.

## Fold/Unfold & Carry

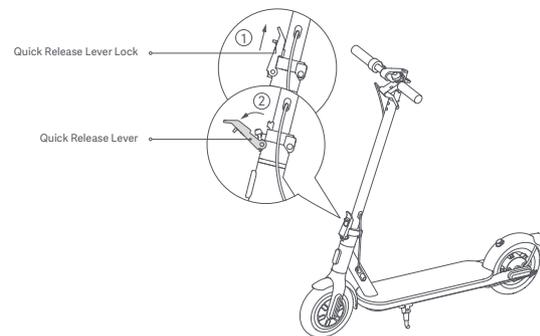


1


Make sure the scooter is turned off and not being charged before folding. Hold the stem, lift the quick release lever lock, and pull the quick release lever outward.

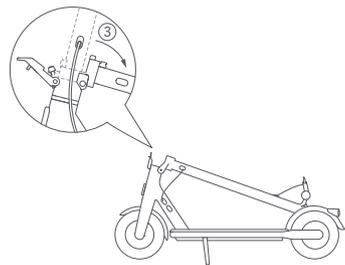


- 2 Fold the stem.

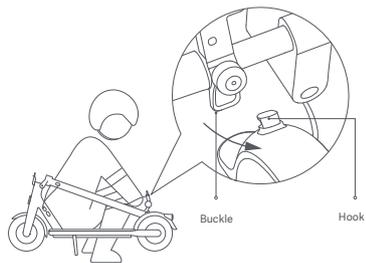

- 3 Align the buckle with the hook and secure them together.

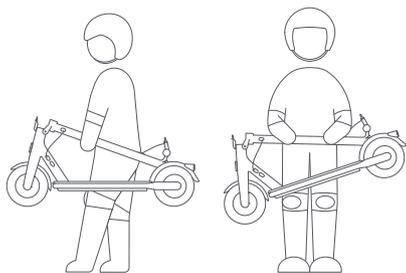


- 4 Hold the stem with either one hand or both hands to carry.

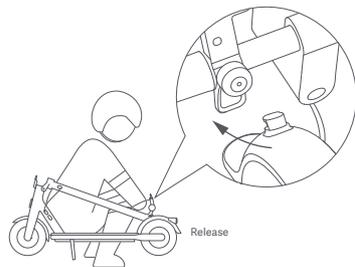

- 5 When unfolding the scooter, pull the buckle upwards to release it from the hook.

## Adjust the Mechanical Brake

---

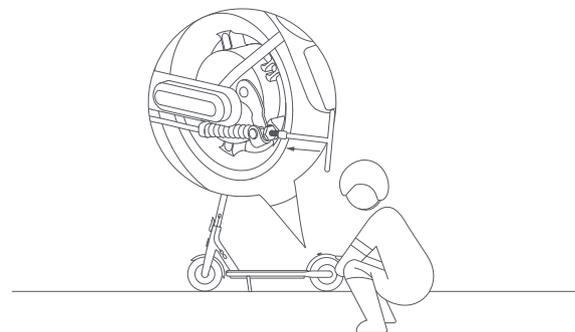


Tool: 14 mm T-handle socket wrench (the tool needs to be prepared by the user).

Before adjustment, make sure the scooter is powered off and not charging. When the brake is too tight, use the tool to turn the nut on the screw rod counterclockwise, so as to slightly shorten the brake cable's exposed bottom part. When the brake is too loose, use the tool to turn the nut on the screw rod clockwise, so as to slightly lengthen the brake cable's exposed bottom part.

## Inflate the Tire




- 1 Connect the pump to the extension nozzle.

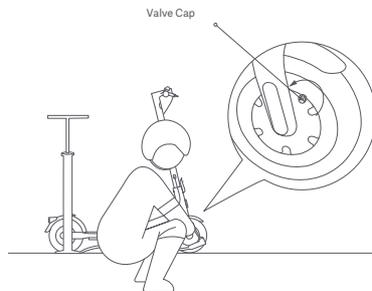

- 2 Remove the tire valve cap, and connect the pump and the valve securely together.



- 3 Inflate the tire.

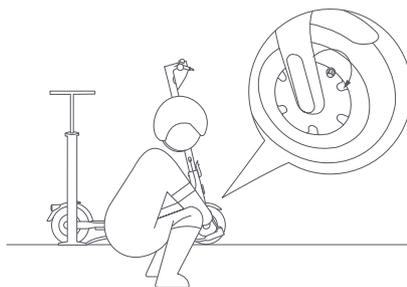

- 4 Remove the extension nozzle, and install the valve cape.



Check the tire pressure every month, and inflate the tires if the pressure is too low. The recommended tire pressure is 50 psi.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

For further information, please go to [www.mi.com](http://www.mi.com)

For detailed e-manual, please go to [www.mi.com/global/service/userguide](http://www.mi.com/global/service/userguide)

This QR code is unique to your scooter and can also be found on the labels attached to the control panel and to the right side of the deck. It is used to connect the scooter with the Mi Home/Xiaomi Home app and contains important information about activating your scooter. Please keep this code safe.

Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

[www.beryko.cz](http://www.beryko.cz)

Do Not Remove



Made in China  
Original instructions